 
 





 







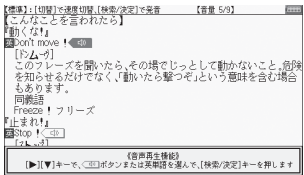 
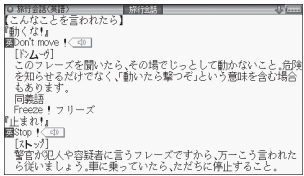 
Listening to audio



 


When the  mark appears, audio of the displayed information can be played back.
Press  to select the first mark, and the color of the mark is inverted.
Press , , , or  to move the highlight to the desired mark and press  to play back the audio.


 


 
Example: Play back the audio using “旅行会話 英語”.

1 Press , select “旅行 I” using , and confirm that “旅行会話 英語” is selected.
Press  until the details screen is displayed.





 


 



 

2 Press  and the mark becomes inverted (). Each time you press , the audio plays.



 


If several  marks appear, press  or  to move the cursor to the desired mark and press .
By highlighting an English word and pressing , you can play back the audio for words that have audio entries in the English-Japanese dictionary.

 
 
- ◆ Press  to stop the audio during play. Press  and the color of  reverts to non-inverted.
- ◆ Use  or  to first set the volume to low, then adjust it to the desired level.

Using the mark on the screen

The , , , , , and  marks indicate that extra information related to the entry is available in the form of example sentences, explanations, notes, illustrations, diagrams, and videos.
Press  in screens where these marks are displayed to invert the display of the mark.
When there are multiple marks, move to the desired mark by using , , , or . Press  to display the contents.
To exit, press  twice.

When multiple tabs appear at the top of the screen

Tabs indicate information related to the currently displayed entry.
Multiple tabs indicate that related information is available. You can view this information by pressing  to switch the screen.
For example, by pressing  and then pressing  twice, you can display the English-Japanese dictionary details screen.

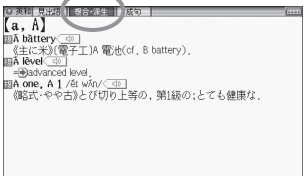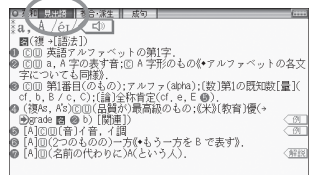


Marker function

It is possible to mark a phrase and register it. (Phrases are registered to the word list.)
• You can use this function to remember a particular phrase, or to hide marked text to memorize definitions.


 
Example: Mark a phrase on the details screen for the word “header” in the ジーニアス英和辞典.

1 Press .

 
 
2 Enter “header” into the “スペル” (spelling) entry area, and then press .
The details screen is displayed.

3 Press  and  (マーカー).
The cursor “■” appears.

4 Press  or  to move the cursor “■” to the first character, “文”, and then press .

5 Press  to move the cursor “■” to the last character, “ど”, and then press .

A message confirming that the phrase has been registered (or that the marker has been added) to the word list appears for a few seconds.

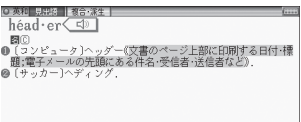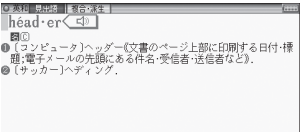



S-jump function

You can search through the contents for the definition or meaning of a word on the details screen.

Example: Use S-jump from the ジーニアス英和辞典 screen.

 
 
1 Press .

The entry/selection screen for ジーニアス英和&英辞典 appears.

2 Select the “読み” (Japanese reading) area using , enter “あいさつ”, and then press .

The “あいさつ” screen of the Japanese-English dictionary appears.

3 Press .
The cursor ■ appears.

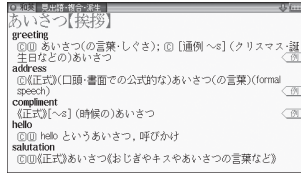

Example sentence search function

It is possible to search for example sentences containing a word by entering it in the appropriate entry area.

Enter the word you would like to search for in the “スペル” (spelling) or “読み” (Japanese reading) entry area.

 
You can enter up to three words at one time.

Example: Search for the words “have” and “your”.



1 Press  and  (例文検索).

The entry screen appears.

 
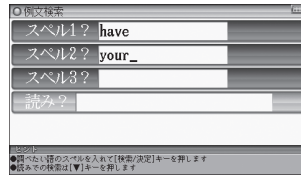 
2 Enter “have”, press , and then enter “your”.



4 Move the cursor using , , , or  to the desired word.


- English words or the word indicated by the jump mark () are selected in whole. Each time you press , you can jump to an English word, skipping Japanese.
- To select a word in kanji, hiragana, or katakana, you must first mark the start and end points.

Example: Marking the word “言葉”

Move the cursor “■” to the starting point “言” and press .
Then press  to move the cursor “■” to the end point “葉”. (If you wish to mark a one letter word, you do not have to mark the end point.)

5 Press .

A list of candidates appears in the jump window.

- If the word is indicated with  or there is only one match, the details screen appears in the jump window.

 
6 Select the desired word and then press .

The details screen appears in the jump window.

7 Press  to jump the screen.

The details screen of the selected word appears.

- To return to the previous screen, press .

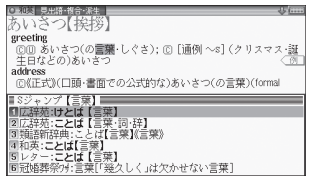

3 Press .

A list of example sentences for the entry appears.

- The tabs at the top of the screen indicate the contents that include the example sentences found for the entry.

4 Press  to select a content tab.

5 View the example sentences by using  or .

