

Notes

 
 
- This QUICK REFERENCE is used for both the PW-SA3 and PW-SB3 models. Whenever the model is not specified, the information applies to both models. The sample screens indicated in this reference are provided for the explanatory purpose, and may differ from the screens on the actual product. The functions and contents that can be used depend on the model.
- Many of the instructions for using this product can be viewed on the screen. Press [HOME] (HOME key) to open the HOME screen, and touch “使い方を見る” (view instructions) at the bottom right of the screen.
- These models are designed exclusively for Japan, with the manuals in Japanese only.
- All company names and product names in this reference are trademarks or registered trademarks of their respective holders.

16BC-73EC


Names and Functions of Parts

- Power key** Press this key to turn the power on and off.
- Search key** Use this key to do a Global search, Full-text search, or other search.
- Content selection keys** Each key displays the initial screen for that content. Each time you press the key, the screen alternates between the 2 types of content.
- My dictionary key** Allows you to directly access the content which you select and set. You can set the content from “お気に入り” (Favorites) in the HOME screen.
- History/Bookmark key** Press this key to view your search history or bookmarks.
- Marker test key** Press this key to use the marker test function.
- Tool key** Press this key to call convenient tools such as the calendar or calculator.
- HOME key** Returns to the HOME screen.
- Shift key** Press this key to use the function enclosed in the frame when a key contains 2 functions.
- Character entry type change key** Press this key to change the type of character to enter on the “調べる” (Search) screen.
- Search symbol key** Press to enter symbols such as “?” or “~”.
- Space/conversion key** Press to enter a space or to convert the entered characters to kanji. For details, see “Input Using Kanji Conversion” on the reverse side.
- Escape key** Returns to the previous screen.
- Enter key** Confirms the menu selection or character entry.
- Smaller characters (Shift + [◀]) / Larger characters (Shift + [▶]) key** Press this key to change the character size.
- Volume keys (Shift + [▲]) / (Shift + [▼]) key** Press this key to adjust the volume of audio. (▶): Turn up, ◀: Turn down
- Delete key** Press to delete entered characters one character at a time.
- Clear (Shift + Delete) key** Returns to the entry screen or initial screen for that content.
- Touch key area** Touch keys such as functions particular to each screen (Handwriting area, Word dictionary, etc.). Cursor, Enter and Escape appear in this area. Touch [F] to change pages.

Note : The operation of a key may vary depending on the content.

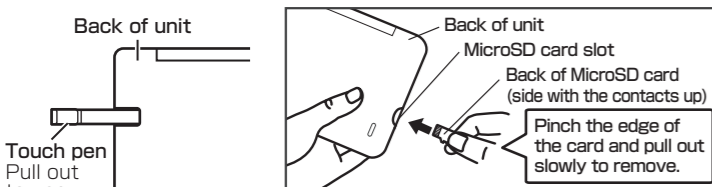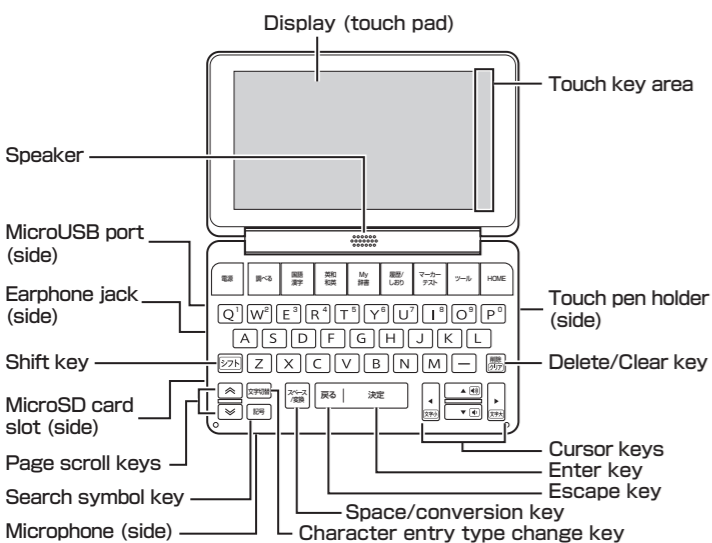

 * microSD/microSDHC Memory Card can be used in this machine.

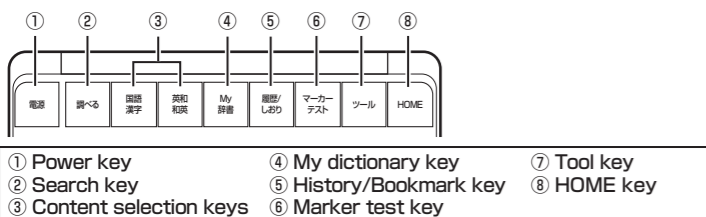

Before Using the Product for the First Time

Be sure to charge the product.

Connect the AC adapter in the order of ①, ②, ③ and charge the product. Two beeps sound when charging begins.

Open the body and check that the battery mark is “” (full charge), then disconnect the AC adapter from the connection terminal and the outlet. Also disconnect the microUSB cable.

- The time required for a full charge is ordinarily about 5 hours (at a temperature of 25° C), however it may take longer depending on the temperature and conditions of use.
- Do not discontinue charging before the battery is fully charged.

The power turns ON automatically when the body is opened.

When the power turns ON for the first time, a screen appears for setting the date and time. Set the date and time in this screen.

<Example>

For 2016/4/16 → Enter “16 04 16”

For 3:45 PM → Enter “15 45”

If you are setting 13 to 23 for the hour, you can omit the AM/PM setting.

- Use the keyboard to enter the numbers. Press the cursor keys [▲] [▼] [◀] and [▶] to move the cursor up/down/left/right.

 
Changing the date and time

Touch “設定” (Settings) in the HOME screen. Select “日付と時刻の設定” (Date and Time) in the Settings screen, and set the date and time.

- You can turn off the charging start sound in HOME screen “設定” (Settings) - “充電開始音の設定” (Charging start sound). You can also press [シフト] (Shift) and then press [文字切替] (Character entry type change) to turn off the charging start sound.
- Use the AC adapter within the specified voltage range (AC 100 to 240 V).

Keyboard style / Touch pen style

There are 2 ways of using the dictionary: keyboard style and touch pen style.

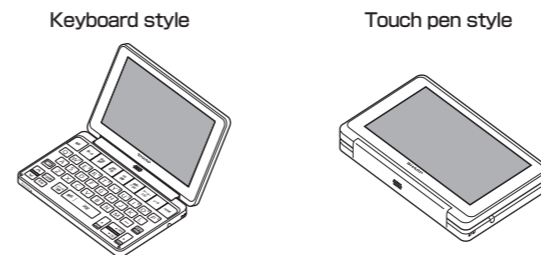

Note : When touch pen style is used, the keys cannot be used (except for the Power key).

Battery Level Indicator

Use the battery mark at the top right of the screen as an approximately guide to the remaining battery level.

Battery mark	Remaining battery level
	Good
	Somewhat depleted
	Depleted. Charging is recommended.
	Depleted. Charge immediately. (At this time, the screen turns dark.)
	Fully depleted. Charge immediately. (At this time, the power turns OFF.)
	Charging

Turning the Power ON/OFF

Turning on the power

The power automatically turns on when you open the dictionary after it has been closed. You can also press [電源] (Power) when the power is off to turn on the power.

- The screen that was last displayed before the power turned off appears (resume function). You can also use “オープニング設定” (Opening setting) to set the opening screen.

Search language

“日本語” (Japanese)	Search using Japanese kana or kanji.
“英語” (English)	Search using English alphabet letters.

To select the search language, either touch the language at the left side of the screen or select using [文字切替] (Character entry type change).

Input methods (touch key area)

	Touch to input by handwriting on the LCD screen.
	Touch to display a software keyboard for input by Japanese kana.
	Touch to display a software keyboard for Japanese/English input by alphabet.

Entering Characters

Entering by Keyboard

The input method for entering Japanese from the keyboard is “ローマ字かな入力” (Japanese input by alphabet).

Entering by Handwriting

Touch of touch keys to display the handwriting area. The provided touch pen can be used to input kanji, kana, and alphabet letters by handwriting in this area. This example shows how to check the meaning of “風”.

- 1 Press [英和/和英] twice to display the initial screen of the ジーニアス和英辞典 (PW-SA3) or the 新和英大辞典 (PW-SB3).
- 2 Touch of touch keys to display the handwriting area.

Turning off the power

 
When the power is on, press [電源] (Power) to turn off the power.

<Automatically turning the power OFF>

Except when additional audio (MP3) “追加音声 (MP3)” or other function is in progress, closing the body turns OFF the power and stops all operating functions.

In addition, if no keys are pressed for a set time (the default setting is 5 minutes), the power will automatically turn off (auto power off function).

“調べる” (Search) Screen

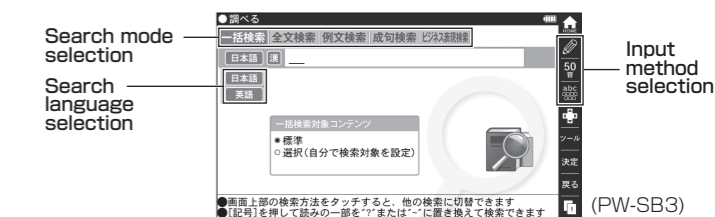

Search modes

“一括検索” (Global search)	Search globally for entries in all applicable contents. Entering more characters will narrow down the result candidates. For details, refer to “Global Search Function.”
“全文検索” (Full-text search)	Search for the input word(s) in the entries and explanation text of all applicable contents. After entering the characters, press [決定] (Enter) to display the search results.
“例文検索” (Example search)	Search for English examples.
“成句検索” (Phrase search)	Search for English phrases.
“ビジネス表現検索” (Business expression search)	Search for business expressions in all applicable contents. (This function is available with the PW-SB3 only.)

The search mode can be selected by touching the mode at the top of the screen or by selecting the mode with [◀] and [▶].

3 Use the touch pen to write “風”.

Note: To rewrite, touch [書き直し] (Rewriting).

4 When you have finished writing, the character will be automatically recognized after a brief interval and “風” will appear in the input field.

Note: If manual recognition is set (select by touching [手動] (Manual)), touch [認識] (Recognition).

5 Press [決定] (Enter), and then Check the search result list with [▼] or [▲].



(PW-SB3)

Entering by Software Keyboard

In addition to the ordinary keyboard, it is also possible to display a software keyboard on the screen and use it for input.

1 Touch to select the language for input.

 
50音かな入力 (Input by Japanese kana)

2 Touch or of touch keys.

- is only enabled when Japanese input is used.
- You can touch when using Japanese input to select “ローマ字かな入力” (Japanese input by alphabet).
- You can touch when using English input to select “英字入力” (English input by alphabet).



ローマ字入力 (Japanese input by alphabet)

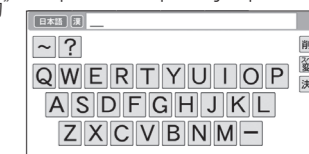

3 Touch the keys on the software keyboard and input the search term.

4 When input of the search term is completed, touch [決定] (Enter).

