

SHARP®

取扱説明書

壁掛用スピーカブラケット

エーディー エーティー エスエー
形名 **AD-AT10SA**

お買いあげいただき、まことにありがとうございました。
この取扱説明書をよくお読みのうえ、正しくお使いください。
ご使用前に、「安全に正しくお使いいただくために」を必ずお読みください。
この取扱説明書は、いつでも見ることができるところに必ず保存してください。

安全に正しくお使いいただくために

この取扱説明書には、安全にお使いいただくためにいろいろな表示をしています。その表示を無視して誤った取り扱いをすることによって生じる内容を、次のように区分しています。

内容をよく理解してから本文をお読みになり、記載事項をお守りください。

⚠ 注意 けがをしたり財産に損害を受けるおそれがある内容を示しています。

図記号の意味

⚠ 記号は、気をつける必要があることを表しています。

⊘ 記号は、してはいけないことを表しています。

安全のため特に注意してください







⚠ 注意

- 取扱説明書に従い、正しく組み立ててください。
組み立てが不完全な場合、落下して、ケガや破損の原因となることがあります。
- 取り付けの際には、金具等に指などをはさまないようにご注意ください。
- 取り付ける天井や壁面は、十分な強度があることを確認してください。
(天井や壁面に補強材の入っている部分に取り付けてください。)
- 壁掛用スピーカブラケットには、スピーカ以外の荷重をかけないでください。
落下によるケガや破損の原因となります。
- 取付部品の改造・変更は行わないでください。
落下によるケガや破損の原因となります。
- 取り付け位置には、十分ご注意ください。
頭を打ったりして、ケガの原因となることがあります。
- スピーカの上に乗ったり、ぶら下がったりしないでください。
特にお子様のいるご家庭ではご注意ください。
落下によるケガや破損の原因となることがあります。

【お問い合わせは】

この製品についてのご意見、ご質問は、お客様相談センターへお申しつけください。
DVD1ビットデジタルシアターシステムの取扱説明書に記載の「お客様ご相談窓口のご案内」をごらんください。

TINSZ1423AFZZ
A0111.2.0MYM.YT

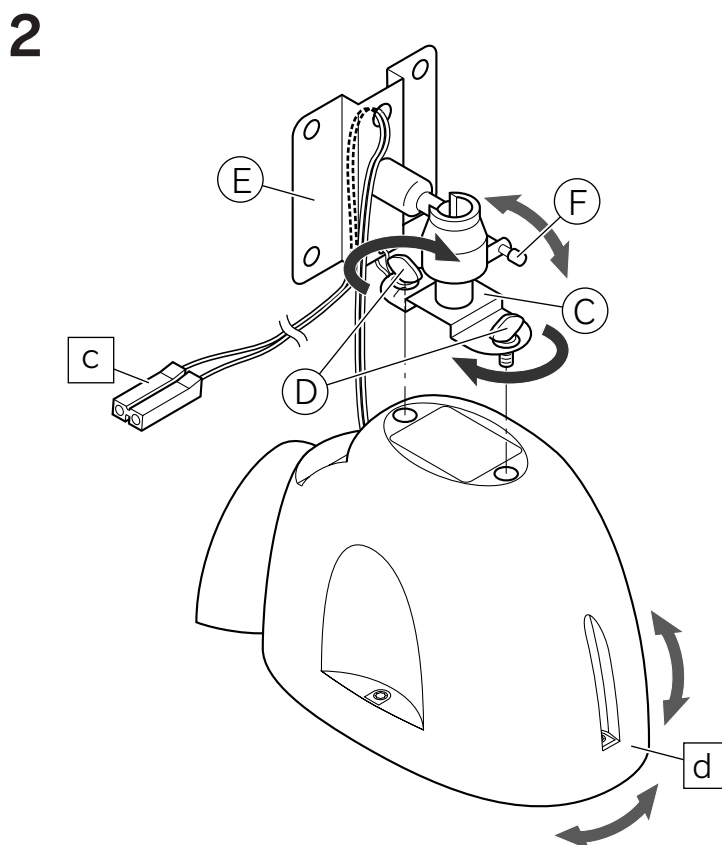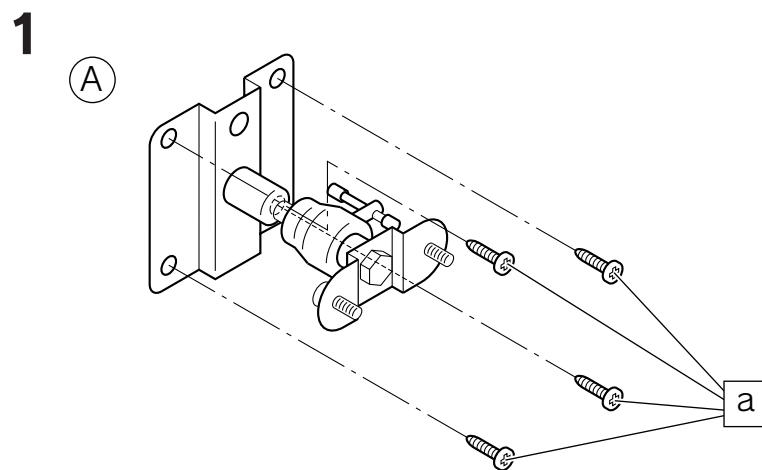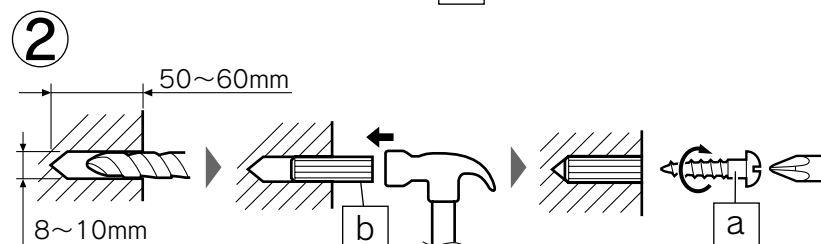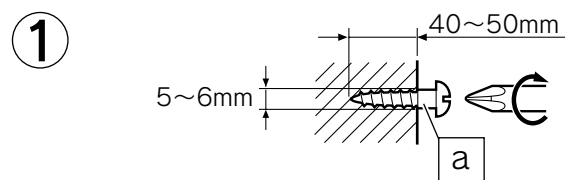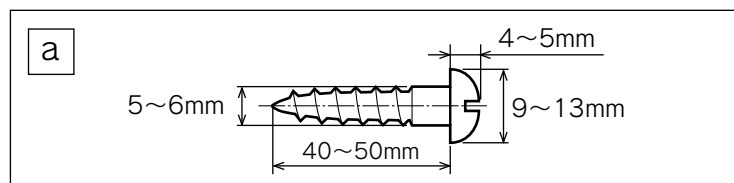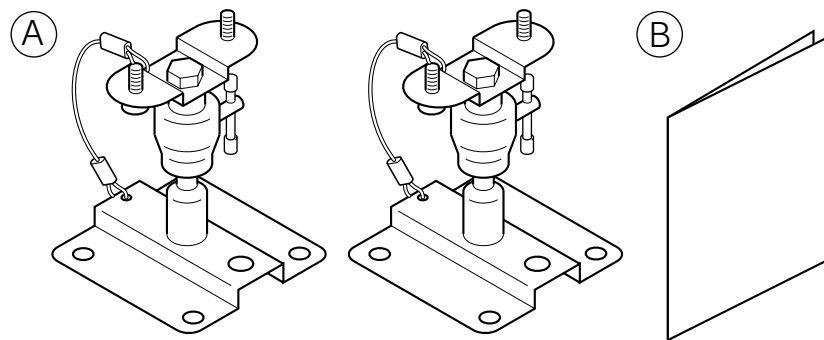

INSTRUCTION MANUAL
SPEAKER WALL BRACKET

MODEL

AD-AT10SA

Thank you for purchasing this SHARP product.
To obtain the best performance from this product, please read this manual carefully.
It will guide you in operating your SHARP product.

Included parts

- Ⓐ Speaker Wall Bracket × 2
Ⓑ Instruction Manual × 1

- Screws for mounting the bracket on the ceiling or wall are not included as their specifications may vary depending on its material. Choose the most appropriate type for mounting.
- Check the firmness of the ceiling or wall fully. Sharp is not liable for accidents caused by insufficient firmness of the ceiling or wall, or improper mounting.
- **The speaker may fall due to unstable mounting.**
If you need any assistance, contact the dealer you purchased the system from.

Items required for mounting

- Ⓐ Screws (commercially available): 4 pcs.
Consult your local dealer for selecting the most suitable type of screws.
- Ⓑ Anchor (commercially available): 4 pcs.
Consult your local dealer for selecting the most suitable type of anchors.

Mounting

1 Fix the speaker wall bracket Ⓐ firmly on the ceiling or wall with 4 commercially available screws Ⓐ.

Leave enough allowance for angle adjustment of the speaker.

① Mounting on wooden wall

Mount the bracket on the firm and strong portion of the wall with certain thickness (5 cm or more).

Never mount it onto thin plates such as veneer plate or boards (plaster boards).

② Mounting on concrete wall

Drill holes into the wall and hammer in the anchors Ⓑ before tightening the screws Ⓐ.

The commercially available anchors Ⓑ must be knocked into the wall until they are leveled to the wall surface.

2 Attach the speaker mounting bracket Ⓒ to the speaker with screws Ⓓ, and adjust the angle of the speaker Ⓓ with the handle Ⓕ.

Lead the speaker cable Ⓒ from the back of the pedestal Ⓔ and connect it to the speaker Ⓓ.
For speaker connections, refer to the operation manual of the 1-Bit Digital Home Cinema with DVD.

Notes:

- Screws may be loosened after hanging the speaker. Tighten them regularly.
- Support the speaker with hand whilst adjusting the angle. Otherwise, the angle changes abruptly, which may lead to an accident.
- Clean the bracket with soft cloth dampened with neutral detergent. Never use organic solvents such as benzene, thinner, etc.

Specifications

Load capacity: 2 kg or less
Maximum outside dimensions: 93 mm (W) × 120 mm (H) × 93 mm (D)
Weight: approx. 490 g

- Use this bracket for recommended models only.

Caution:

- Mount the speaker wall bracket observing instructions in this manual.
If it is not mounted properly, the speaker may fall and cause injury or damage to people and the speaker.
- Be careful not to jam your fingers in the bracket whilst mounting.
- Make sure that the ceiling or wall is firm enough to bear the speaker. (Mount the speaker at the portion where the reinforcing material is applied.)
- Do not apply any other load to the fittings than the speaker. Otherwise it may cause injury or damage to people and the speaker.
- Do not modify or change the fittings. Otherwise it may cause injury or damage to people and the speaker.
- Check the installation position carefully so that people do not hit their heads against it.
- Never step on or hang from the speakers. Especially pay attention to small children. It may cause injury or damage to the speaker.

同梱部品

- Ⓐ 壁掛用スピーカーブラケット × 2
Ⓑ 取扱説明書 × 1

- 天井や壁面に取り付けるネジ類は、材質によって仕様が異なるため、付属していません。取り付ける場合は、適切なものを選んでください。
- 天井や壁面の強度をよく確認してください。強度不足や、取り付けの不備による落下などの事故につきましては、当社は一切責任を負いません。
- **不安定な取り付けは、落下の危険性があります。**
ご自分で取り付けが不安な方は、お買いあげの販売店や工事店にご相談ください。

用意するもの

- Ⓐ ネジ (市販品) 4 本
ご用意いただく際は、販売店や工事店にご相談ください。
- Ⓑ アンカー (市販品) 4 本
ご用意いただく際は、販売店や工事店にご相談ください。

設置方法

1 天井または壁面に、壁掛用スピーカーブラケット Ⓐ を市販のネジ Ⓐ (4 本) でしっかり取り付けます。

このとき、スピーカーを取り付けた際の角度調整範囲の余裕をもたしてください。

① 木壁に取り付ける

しょうぶな壁を選び、一定の厚み (5cm 以上) のある所へ取り付けてください。
ベニヤ板など薄い板壁やボード版 (石こう板) には、直接取り付けないでください。

② コンクリート壁に取り付ける

ドリルを使い壁に穴をあけ、市販のアンカー Ⓑ を打ち込んだあと、市販のネジ Ⓐ を止めます。
市販のアンカー Ⓑ は、壁の表面と同じ高さまで打ち込んでください。

2 スピーカー取付金具 Ⓒ に、スピーカーをスピーカー取付ネジ Ⓓ で取り付け、ハンドル Ⓕ でスピーカー Ⓓ の角度を調整します。

台座 Ⓔ の裏からスピーカーコード Ⓒ を通し、スピーカー Ⓓ に取り付けてください。
スピーカーとスピーカー接続コードのつなぎ方は、DVD1 ビットデジタルシアターシステムの取扱説明書をごらんください。

ご注意

- スピーカーを取り付けた後、ネジなどがゆるむことがあります。
必ずネジなどを締め直してください。
- 角度を調整するときは、スピーカーをしっかり支えながら行ってください。
支えないでハンドルをゆるめると、傾きが急激に変わり危険です。
- 清掃は、中性洗剤をしみ込ませたやわらかい布でふいてください。
ベンジンやシンナーなどの有機溶剤は、使用しないでください。

仕様

スピーカー耐荷重: 2kg 以下
最大外形寸法: 93mm (幅) × 120mm (高さ) × 93mm (奥行)
質量: 約 490g

- カタログなどに掲載されている推奨機種以外には使用しないでください。

シャープ株式会社

本社 〒545-8522 大阪市阿倍野区長池町22番22号
電話 (06) 6621-1221 (大代表)

AVシステム事業本部 〒739-0192 東広島市八本松飯田2丁目13番1号
電話 (0824) 28-2401 (大代表)