


Layout

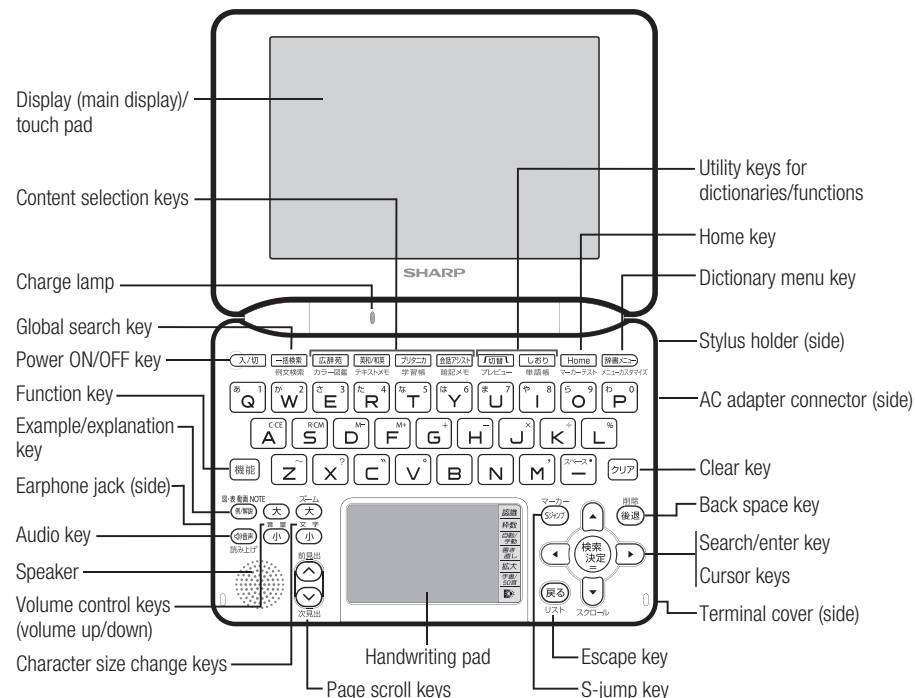

Selecting a content in the dictionary menu screen

Press **辞書メニュー**.

The dictionary menu screen appears.


Category menu

Select an item by pressing **▶** or **◀**.

Individual menu

Select an item by pressing **▼** or **▲** and then press **検索/決定**.

Or, select an item by typing **1** to **9**.

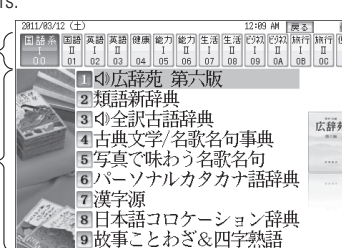

Dictionary menu screen (contents/functions selection display)

Selecting a menu item

1 Press **辞書メニュー**.

2 Use **▶** or **◀** to select a category menu item. Or, use the numeric keys to enter the category number to select the item.

The individual menu for the selected category menu item is displayed.

3 In the individual menu, use **▼** or **▲** to select the content/function and then press **検索/決定**. Or, use the numeric keys (**1** to **9**) to enter the number in front of the content/function (**1** to **9**).

The selected content/function screen is displayed.

- The selected content/function screen can also be selected by touching the relevant menu item.

Selecting a function in the Home screen

Press **Home** to display the Home screen. You can select and use unit functions from the Home screen.

Move the cursor to the desired icon using **◀**, **▶**, **▼**, or **▲** and press **検索/決定** or touch the icon to select it.




Touch operations

The PW-AC910 can be operated by touching the main screen with the stylus.

The following touch operations are supported.

Single touch:


This is the operation of lightly touching or pressing an item or button on the screen and releasing it.

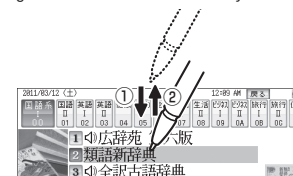

Double touch:

This is the operation of touching the same place twice on the screen.

On the dictionary list screen, for example, a candidate is selected by the first touch and the screen is switched by the second touch.




Using the PW-AC910 for the first time

Be sure to charge the battery before using the unit.

1 Connect the (EA-80A) AC adapter in the order of ① and then ②.

When the charge lamp lights red, the charging has started.

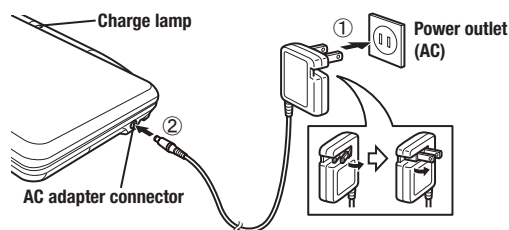


2 When charging is complete, the charge lamp will turn off.

- A complete charge will normally take approximately 5.5 hours (the charging time can change depending on operating temperature and conditions).


3 Remove the AC adapter from the connector and the outlet.

4 Open the unit and press **入/切** to turn on the power.

After a while, the calibration screen for the touch pad appears on the display (main display).

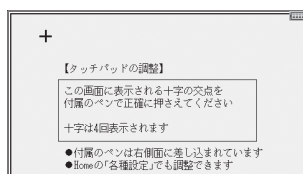

5 Pull out the stylus and use it to accurately touch each center of the four “+” characters displayed on the touch pad on the display. Then do the same to the four “+” characters displayed on the handwriting pad (small screen).

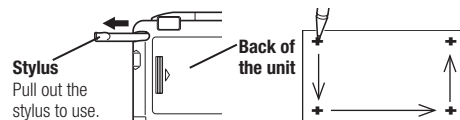

6 Adjust the LCD contrast of the handwriting pad by touching **淡く** or **濃く** on the pad.

7 After these adjustments, press **検索/決定**.

The key sound (beep) on/off screen appears.

8 Press **Y** or **N** to turn the key sound on/off.

The kana entry screen appears.

9 Press **Y** to select alphabet character input or press **N** to select Japanese input.

The date/time settings screen is displayed.

10 Select the date items using **▶** or **◀**, and then enter “年” (year), “月” (month) and “日” (day) (e.g. March 12th, 2011 → 11 03 12) using the number buttons on the handwriting pad. Confirm that the cursor is on “AM (午前)” or “PM (午後)”, and then select one of them using **▶** or **◀**.

Press **▼**, select the time items using **▶** or **◀** and then enter “時” (hour) and “分” (minute) (e.g. 9:00 → 09 00).

11 Confirm that the information entered is correct and press **検索/決定**.

The Home screen appears.

Global search function

You can search for a word in multiple contents/dictionaries.

Enter a word into any of the “日本語” (Japanese), “スペル” (English spelling), “中国語” (Chinese), “ピンイン” (Pinyin), and “韓国語” (Korean) fields to search within the target dictionary.

As you type, the candidates for matching narrow (filter search). If there are still many candidates after entering the whole word, you can switch to “exact search” to browse only the exact word you wish to have defined (Except for the search using Pinyin).


- Japanese kanji, Chinese (Simplified characters), and Korean (Hangul) characters have to be entered by hand.

Example: Global search for the word “advantage.”

1 Press **一括検索**.


The global search entry screen appears.

Select the text field according the entry character type by using **▼** or **▲**.

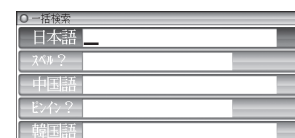


2 Press **▼** and enter “advantage” in the “スペル?” field.

As you type, the candidates for matching narrow.

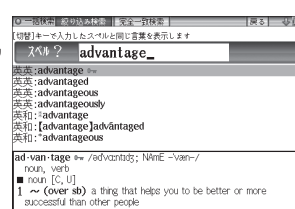

3 Press **切替** to search by “exact search”.

The list of words corresponding to your entry appears.

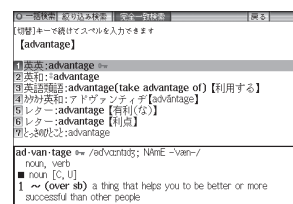

To change the entry, press **切替** to return to the filter search screen and enter again.

4 Select the desired word using **▼** or **▲** and press **検索/決定**.

The details screen of the word appears along with its definitions.

- To return to the previous screen, press **戻る**.

Preview display function

If many candidates are listed for a word and it is difficult to decide which word is the correct one, the preview display will help you by providing a brief note about each word.

Each time you press **機能** / **切替** “プレビュー” (preview) while candidates are listed, the preview display will be shown on the bottom, shown on the right, or turned off in this order. (The preview display is turned off in this screen example.)



